

WiFi BLE Transparent Transmission Module

MS11SF1

Datasheet

V 1.1.0

Applicable Product Model

MS11SF11

Copyright© Shenzhen Minewsemi Co., Ltd.

Version Note

Version	Details	Contributor(s)	Date	Notes
1.0.0	First edit	CoraL	2022.11.08	
1.1.0	Added SPI pin description	Vincle	2023.07.20	

MS11SF1-ESP32C3

Support 2.4G Wi-Fi4(IEEE802.11 b/g/n), support AP/STA/AP+STA Mode, Tiny size



MS11SF1 is a WIFI + BLE Soc combo module that supports WIFI 4 as well as BLE 5.0. This module supports Wi-Fi4 + BLE 5.0, equipped with RISC-V 32-bit single-core processor, the operating frequency up to 160MHz. MS11SF1 supports the use of AT commands to development, through the serial port to send AT commands to configure the Wi-Fi, BLE, to achieve the function of pass-through.BLE single packet can support up to 514 bytes to be sent, the chip wakes up BLE and BLE and WIFI start at the same time when the chip wakes up, WIFI is STA mode by default and BLE is broadcast mode.

Features

- Bluetooth 5.0
- Supports 2.4G Wi-Fi4 (IEEE802.11 b/g/n), backwards compatible
- Supports development using AT commands and ESP-IDF.
- Supports AP provisioning, SmartConfig provisioning, and BluFi provisioning

Application

Smart Homes Consumer Electronics Intelligent wearable device Security Equipment Automotive Devices Smart Agriculture

Key parameter

Chip Model	ESP32C3	Antenna	PCB/ ANT Pin
Module size	16.6×13.2×2.2mm	GPIO	22
Flash	4MB	RAM	400KB
Receiving	07dDm	Transmission	BLE: -27 ~ +18dBm
Sensitivity	-970611	Power	Wi-Fi: +10 ~ +20dBm
Current(TX)	278mA	Current(RX)	87mA
Firmware	AT Firmware		

3

INDEX

1 Block Diagram	6
2 Electrical Specification	6
3 Pin Description	7
4 Pin Definition	8
4.1 SPI data communication ports	9
5 Mechanical Drawing	10
6 Electrical Schematic	11
External RTC crystal oscillator circuit:	
7 Transparent Transmission Function Description	13
7.1 BLE transparent transmission	13
7.1.1 BLE instruction mode	14
7.1.2 BLE transmission mode	15
7.2 WIFI transmission	17
7.2.1 Soft-ap mode example	17
7.2.2 STA mode example	
7.2.3 Soft-ap + STA mixed mode example	22
7.2.4 Connect the cloud server to the MQTT	23
8 Power Consumption Description	24
8.1 RF power consumption	24
8.2 Power management	24

4

9 PCB Layout	25
10 Reflow and Soldering	27
11 Package Information	28
Quality	
Contact Us	
Copyright Statement	

1 Block Diagram



2 Electrical Specification

Parameter	Values	Notes
		To ensure RF work, supply voltage suggest not
vvorking voltage	3.3V-3.6V	lower than 3.3V
Power supply current	≥500mA	
Working Temperature	-40℃~+85℃	
BLE Broadcast	27 10dDm	Configurable
Transmission Power	-27 ~ +100DIII	Configurable
WiFi RF Transmission	10 20dBm	Configurable
Power	+10 ~ +20dBill	Configurable
Receiving	07dDm	
Sensitivityurrent	-97 dBm	

6

Web: www.minewsemi.com

Tel: 0755-2801 0353 E-mail: <u>minewsemi@minew.com</u> Copyright© Shenzhen Minewsemi Co., Ltd.

3 Pin Description



7

4 Pin Definition

Pin Number	Symbol	Туре	Definition
1	GND	Grounded	
2	VDD33	Supply Power	
3	CHIP_EN	Sleep/Wake-up pin	High level: Chip operational Low level: Chip in sleep mode
4-8	GPIO0-GPIO4	Ю	General-purpose IO (GPIO), firmware not utilized.
9	GPIO5	BLE CONN-IND	High level: Connected Low level: Not connected
10	GPIO6	Serial port RX	UART1
11	GPIO7	Serial port TX	UART1
12	GPIO8	Ю	General-purpose IO (GPIO), firmware not utilized.
13	GND	Grounded	
14	GPIO9	Ю	General-purpose IO (GPIO), firmware not utilized.
15	GPIO10	Ю	General-purpose IO (GPIO), firmware not utilized.
16	VDD_SPI	Supply Power	VDD_SPI is typically used to provide power to the chip's built-in flash or external flash. It can only be used as GPIO11 when an external flash is connected and powered separately.
17-22	SPICS0-SPIWP	IO	General-purpose IO (GPIO) or SPI interface, firmware not utilized.
23	GND	Grounded	
24-25	GPIO18-GPIO19		General-purpose IO (GPIO) or built-in USB-to-JTAG interface.
26-27 30-32	NC	_	Not connected
28	U0TXD	TXD	Used for firmware debugging

MS11SF1 Datasheet

29	U0RXD	RXD	Used for firmware debugging
34	ANT	RF	Antenna pin
35	GND	Grounded	

Notice:

1. The MS11SF1 has a total of 3 SPIs (SPI0, SPI1 and SPI2). SPI0 and SPI1 can be configured in SPI memory mode, and SPI2 can be configured in general SPI mode.

2. GPIO11-GPIO17 have been connected to the SPI Flash pins inside the module and are not recommended for other functions.

3. In order to ensure the regular power supply when the MS11SF1 module is used, an RC delay circuit needs to be added to the EN pin. The RC is usually recommended to be R = 10 k Ω , C = 1 μ F.



4.1 SPI data communication ports, as follows

MS11SF11	SPI	MCU-SPI
GPIO2	SPIQ/DO	MOSI
GPIO6	SPICLK	SCLK
GPIO7	SPID/DI	MISO
GPIO10	SPICS0	CS
GPIO3	HANDSHARE	HANDSHARE_EN

9

Web: www.minewsemi.com

Notice:

Where as the module pin-out diagram, <u>SPI pins in the red box line</u>, the above pins are not recommended for other functions. It is the data port connection between ESP32-C3 series chips and external flash chips.

5 Mechanical Drawing



* (Default unit: mm

Default tolerance: ±0.1)

6 Electrical Schematic



Notice: If you need to use an external antenna annoying please contact the salesman, need to internally modify the 0Ω resistor connection direction.

External RTC crystal oscillator circuit:



Notice:

- > The 32.768kHz crystal oscillator selected requirements:
- ➤ -Equivalent Series Resistance(ESR)≤70kΩ
- The load capacitance values at both ends are configured according to the specifications of the crystal oscillator
- > Parallel resistor R10 is used for paranoid crystal oscillator, this resistor is usually NC.
- If can't the RTC CLK source, else Pin 4(XTAL_3K_P) and Pin5(XTAL_32K_N) can also be configured for GPIO port.

7 Transparent Transmission Function Description

This firmware includes BLE slave transponder, WIFI can be setted as AP or STA mode for data transfer. WIFI can be connected to a variety of cloud servers, such as Ali Cloud, Baidu Cloud, Amazon cloud, etc.. BLE and WiFi can be started at the same time, but when transmitting data, BLE has to exit instruction mode because of transmission through, and WIFI data transmission is through instruction control, so BLE and WiFi can not be carried out at the same time, data transmission.

In order to ensure the normal operation of the module, the module needs to provide a stable 3.3 V voltage, CHIP-EN pin pull up, the module will be awakened, into the BLE broadcast state and serial port will be opened. WIFI is not started, needs to be configured with instructions to start.

In the instruction mode, the basic parameters of the module, BLE parameter and WIFI parameter can be configured by AT instruction. See the MS11SF1-AT command set file for details.

7.1 BLE transparent transmission

The module ble defaults:

Broadcast name: Minew	broadcast time: 1s			
Baud rate: 9600bps, 8N1	serial port parity bit: no parity			
Connection interval: 20-40 ms	transmit power: 0 dbm			
Service UUID:0x0000FFF0-0000-1000-8000-00805F9B34FB				
Notify UUID: 0x0000FFF1-0000-1000-8000-00805F9B34FB				
Write UUID: 0x0000FFF2-0000-1000-8000-00805F9B34FB				
Custom broadcast data: Minewsemi Tech				
BLE broadcast, that is, instruction mode, all data sent through the serial port will be				
considered as an instruction; when connected, it will enter transmission mode				
The transmitted serial part data is transmitted through the DLE CONNUND pint				

The transmitted serial port data is transmitted through the BLE CONN-IND pin to confirm whether the device is connected.

7.1.1 BLE instruction mode

After power-on correctly, the module will automatically turn on BLE broadcast, at this time all the data entered by the serial port are regarded as instructions. Instructions can be found in the Bluetooth Low Energy AT command set section of the MS11SF1-AT command set file, and can modify BLE's broadcast name, broadcast custom data, service UUID, broadcast interval, connection interval, and other parameters. If all parameters are set successfully, "OK R N" will be returned. If the setting fails, "Error r n" will be returned. Module Bluetooth broadcast, through the mobile app such as nrf connect (or Minew UART) scanning device, device default broadcast name is Minew_MS11SF1, broadcast data content as shown in the figure.

=	Devi	ces	STO	P SCANN	NG 🚦
SCA	NNER	BONDED	AD	VERTISER	
Only Apple	favorites Microsoft, 1	Samsung, Google	, Екрози	re Notificatio	* ×
2	Minew_ 60:55:F9 NOT BO Device to Advertisi Flags: Ge Completo Service I 0x6055F Manufac Company Technolo 0x4D696	MS11SF1 2:C4:15:D2 NDED A -1 ype: LE only ng type: Lega eneralDiscover e Local Name: Data: UUID: 0x 9:C415D2 turer data (Blu y: Shenzhen M ogies Co., Ltd. be6577536560	52 dBm cy rable, Bi Minew FFE1 Da ectooth linew <0x063 D69205	CONN ↔ 1002 m rEdrNotSup _MS11SF1 ata: Core 4.1): 9> 4656368	IS
		CL	ONE	RAW	MORE

7.1.2 BLE transmission mode

When the device is connected by a host such as a mobile phone app, it will enter transmission mode, at this moment, all data entered by the serial port will be treated as Transparent transmission data, which is forwarded to the host via Bluetooth. The interface after the App connects is as shown, with both the default service UUID and the feature UUID is 16-bit, and the service UUID or feature UUID can be set to 128 bits by instruction in broadcast mode.

≡ Device	s	DISCONNECT	
BONDED	ADVERTISER	MINEW_MS11SF 60:55:F9:C4:15:D2	'×
CONNECTED NOT BONDED	CLIEN	T SERVER	:
Generic Attribu UUID: 0x1801 PRIMARY SERVIC	u te		
Generic Access UUID: 0x1800 PRIMARY SERVIC	B E		
Unknown Servi UUID: 0xFFF0 PRIMARY SERVIC	ce E		
Unknown Ch UUID: 0xFFF1 Properties: NO	aracteristic TIFY		<u>444</u>
Descriptors: Client Characte UUID: 0x2902	eristic Configur	ation	<u>+</u>
Unknown Cha UUID: 0xFFF2 Properties: WR	aracteristic	NSE	<u>+</u>

In addition, when the device is connected, the default MTU is 23 bytes, which means that a packet can only support sending up to 20 bytes. The maximum MTU supported by the device is 517 bytes, that is, a packet can send a maximum of 514 bytes. The MTU must be set after the APP is connected. Setting the MTU via NRF Connect is shown in the figure below.

≡ Device	S DISCONNECT
BONDED	ADVERTISER MINEW_MS11SF1 ×
CONNECTED NOT BONDED	CLIENT SERVER
Generic Attrib UUID: 0x1801 PRIMARY SERVIC	Read characteristics
Generic Acces	Enable CCCDs
PRIMARY SERVIC	Read remote RSSI
Unknown Serv	Reliable write
Unknown Cf	
UUID: 0xFFF1 Properties: NC	Request MTU
Descriptors: Client Charact UUID: 0x2902	Read PHY
Unknown Ch UUID: 0xFFF2	Set preferred PHY
Properties: WR	TE NO RESPONSE

7.2 WIFI transmission

WI-FI can be set to STA mode or Soft-AP mode, or you can use a combination of the two. In the default firmware, to reduce the power consumption of the command usage process, the radio frequency function of wi-fi is turned off, so before using WIFI normally, you need to enter the command AT + WIFI = 1 in command mode (A return key is required for line feed), and then return OK, you can also use AT + NVS command to save WIFI's default RF state to FLASH. For more detailed WIFI instructions, refer to the WIFI command set section in the MS11SF1-AT command set file.

7.2.1 Soft-ap mode example

Soft-AP mode can be colloquially referred to as a base station, which other devices can connect to through the outgoing WIFI. Through a simple module as Soft-AP in UDP transmission UART WIFI transmission function example, to illustrate the basic usage of module AP mode. The sequence and response of serial port instruction are as follows: 1) AT+WIFI=1 Return: OK ② AT+CWMODE=2 Return: OK //turn on the RF function of WIFI //set the WIFI Mode to Soft-AP mode ③ AT + CWSAP = "ESP32", "1234567890", 5,3 //set WIFI name and password in AP mode Return: OK The module establishes the UDP transmission of the fixed-end IP address and the port corresponding to the PC, and the remote IP address is 192.99. 168.4.2, the remote port is 8080, the local port is 2233, and the mode is 0. (4) AT+CIPSTART="UDP","192. 168.4.2",8080,2233,0 Return: Connect OK ⑤AT+CIPAP? //query module for IP Gateway Information Return: + CIPAP: IP: "192.168.4.1" + CIPAP: gateway: "192.168.4.1" +CIPAP:netmask:"255.255.255.0"

At this time the module has generated a WIFI named ESP32, now you can use the PC side to connect the AP, connect successfully, use the serial network data debugger, port selection UDP, create a UDP service transport. Local IP address, select 192. 168.4.2, port written to 8080, remote IP address queried for 5 instruction gateway address 192.0. 168.4. 1, the port is ④ instructions to set the module port 2233, and finally click on the connection can be.

郬	窗口 打开文	(件)			
端口	号 WDP			•	☐ HEX显示
远程	192.168.4.1		2233	连接	▶ 加时间戳
本地	192.168.4.2	•	8080	断开	0000
为了则请您过	。 更好地发展SSCO 主册嘉立创P结局	₩ 軟件 電客戸	ł	支送	

⑥AT+CIPMODE = 1

//entering UART WIFI transmit-receive mode

Return: OK

After entering the pass-through receiving mode, the PC can carry out WIFI transmission with the module, but only in one direction. Now the module is in command mode and can receive WIFI pass-through data sent from the PC.

▲ SSCOM V5.13.1 半日/网络数据需试题(Fall:大好丁丁.26	18058@qq.com. 🤆 🦍 S	SCOM V	5.13.1	市口/宛	希数据	调试器,作者	大師丁丁	26180)58@qq.cc	im.
透讯跳口 串口设置 显示 发法 多字符串 小工具 解	RT MIT	ACI #0	一设置	最示	发送	多字符串	小工具	帮助	联系作者	7
[17:36:59.762][[:++◆AT+CWMC0E+2	[17:4	24.772]	送→01	MS11SF1						
DBC	17:4	27.493	<u>\$</u> ≓8	IS115F1 IS115F1	B					
[17:37:00.096][g-+OAT-CR5AF-"ESP32_s+ftaf", "1234567690	C8.3 🗖									
[17:37:03.946][[t+++AT+CWSAP="ESP32_seftap", "1234567690	°, 5, 3									
[17:37:04.509]¥k.↔ 08										
[17:37:08.866]安→OAT-CIPSTART="UDP", "192.168 4.2", 808	0. 2233. 0									
[17:37:08.837]][++ +AT-CIPSTART="UDF", "192.168.4.2", 808 CONNECT	0, 2233, 0									
DB:										
[17:37:14.494]安→OAT-CIFAF?										
[17:37:14.502](b+	_									
08										
[17:37:35.825]0b+										
[17:37:38.204]]{++++0157_574_1F: "48:6f:99:64:51:ed". "1	92.168.4.2"									
[17:37:41.155][t+++0IST_STA_IP: "48:55:99.64 b1:ed", "1	92.168.4.2*									
[17:42:24.800]Ut+◆ *IFD.8:#5115F11										
[17:42:27.519]]dz↔◆ +IPD.8:85113F11										
[17:42:27.760]Ut+-◆ *IF0.6:MS1ISF11										
清除窗口。打开文件。	发送文》 清朝	a a t]开文件	1		513			发	送文
编口号 COME9 USB-Rahaso+d-SENIAL (*) 厂 MEX展示 保存	11日 一接秋秋福日 第日	UDP				· - H2	·費示 (¥存款計	「 接吹	R) 58
美國集口 C 更多集口设置 10时间数和分包	显示。 翻封间 四远程	192.168.4	1	223	1.12	12 10 10	时间酸和	计包显示	n dente ta	H 2
FRIS F DIR 波特军 9600 ● AT+CIPAF?	本地	192.16B.4	2	+ 809) HE	H\$1131	11			

⑦AT+CIPSEND//enter WIFI transmission mode to receive and send data

Return: OK

After the input of the instruction, you can achieve two-way through the function of the serial input of all data are through the data, if you want to exit the transmission mode, in the serial input + + + (no carriage return line wrap) can enter the normal instruction mode.

When you exit transmission mode with + + + , you are back to Passthrough receive mode, and the TCP connection is still valid. You can resume the Pass-through transmission mode by using the AT + CIPSEND command. Exit UART WIFI Passthrough receive mode using the command: AT + CIPMODE = 0 and close TCP connection command: AT + CIPCLOSE.

7.2.2 STA mode example

STA mode, is a module that can connect to hot spots from a router or mobile phone. Through example: a simple module as a TCP client in STA mode to achieve UART WIFI

transmission function, to illustrate the basic use of STA mode module. The sequence and response of serial port instruction are as follows:

① AT+WIFI=1 //Enable the RF function of WIFI

Return: OK

② AT+CWMODE=1 //Set WIFI Mode to STA mode

Return: OK

③AT+CWJAP="MS11SF1", "1234567890" //name and password to connect to other device hotspots.

Return: WIFI CONNECTED Wifi GOT IP OK

The SSID and password you entered may be different from the above command. Please use your device SSID and password.

(4)AT + CIPSTA? //query the IP address of the device

Return: + CIPSTA: IP: "172.16.1.193"

+CIPSTA:gateway:"172.16.0.1"

+CIPSTA:netmask:"255.255.254.0"

Your query results may differ from the above returns

Then connect to the same hotspot as the device on the PC, use the serial port network data debugger on the PC, create a TCP server, select the local IP address 172.16.1.216, port 8080, and listen.

端口	号 TCPServer			•
远程				侦听
本地	172.16.1.216	-	8080	断开
为了官	172.16.1.216			

As a client, the module is connected to the TCP server through TCP. The IP address of the server is the local IP address 172.16.1.216 set by the debugger above, and the port is 8080. It can be connected through instructions.

⑤ AT+CIPSTART="TCP","172. 16. 1.216",8080

Return: Connect OK

⑥AT+CIPMODE=1//enter UART WIFI transmit and receive mode

Return: OK

At this time the module will enter the transmission and instruction mode, can be carried out at the same time the instruction output and TCP server data reception.

⑦ AT+CIPSEND

Back to: OK >

After the input of the instruction, you can achieve two-way transmission function, all data input serial data are transmission data, if you want to exit, the transmission state, enter + + + (no carry out return) on the serial port to enter the normal instruction mode.

When you exit Passthrough mode with + + + , you are back to Pass-through receive mode, and the TCP connection is still valid. You can resume the Pass-through transmission mode by using the AT + CIPSEND command. To exit UART WIFI transmit Receive mode, use the command: AT + CIPMODE = 0,

Close the TCP connection command: AT + CIPCLOSE.

MS11SF1 Datasheet

MINEWSEMi

通用調口 申口设置 显示 波送 多字符串 小工具 報助 联系作	唐 大经总运	通讯施口	*口设置	間示	激逐	多亨符串	小口
$ \begin{matrix} [6:23:17, 340] & \downarrow \leftarrow 487113711 \\ [6:23:18, 555] & \downarrow \leftarrow 487113711 \\ [6:23:19, 555] & \downarrow \leftarrow 487113711 \\ [6:23:23:30, 621] & \downarrow \leftarrow 487113711 \\ [6:23:23:30, 621] & \downarrow \leftarrow 487113711 \\ [6:23:23:30, 621] & \downarrow \leftarrow 487113711 \\ [6:23:23:30, 627] & \downarrow \leftarrow 487113711 \\ [6:23:23:30, 677] & \downarrow \leftarrow 485113711 \\ [6:23:23:677] & \downarrow 485113711 \\ [6:23:23:677] & \downarrow \leftarrow 485113711 \\ [6:23:23:677] & $		16 23 17 16 23 18 16 23 19 16 23 19 16 23 21 16 23 21 16 23 21 16 23 21 16 23 23 16 23 23	204 支生+0000 支生+0000 1495 支生+405 地球 405 地球 405 地球 405 地球 405 地球 405 地球 405	40711371 4071137 4071137 4071137 4071137 4051137 4051137 4051137			
	发表文件 华止:	清除畜仁	1 11#21	¥]		-	
編四号 COM7 USD-Tal-sared-STILL C ● FBS型示 保存許描 F 務 ▲ 全国地口 / 更多用口设置 F 10时间能和分物算元 20时	時間間又住「 目前」20 mm第	通知時間	22 MEANS		Titte	T to)唐示 村岡朝
「RTS F DTR 波特案 9600 · 15711		本地 172	16.1.216	• 808	0 1	# 10/1153	11
16 16 15 652 102 + OAT*CHADE-1 16 15 15 652 102 + ◆AT*CHADE-1 16 15 15 652 102 + ◆AT*CHADE-1 16 17 10 171 122 + OAT*CHAD="Miner&sni-1", "Miner&sni123" 16 17 10 224 102 + ◆AT*CHAD="Miner&sni-1", "Miner&sni123" 16 17 10 056 102 + ◆AT*CHAD="Miner&sni-1", "Miner&sni123" 16 17 17 10 050 102 + ◆AT*CHAD="Miner&sni-1", "Miner&sni123" 16 17 17 17 10 050 102 + ◆AT*CHAD="Miner&sni-1", "Miner&sni123" 17 17 17 17 17 17 17 17 17 17 17 17 17 1		21 27 434) 21 27 492) 21 28 557)	左→○@7113 友→○@7113 友→○@7113	711 711 711			
16:21:20:002]0}+-♠M07115911 16:21:20:706]0}+-♠M07115911							
清除窗口 打开文件 发送		a second of the second	and the second se				
and the state of a latter water in and	林 山彩 村文法	A DOPEN	弁文(中)		+11	10194-0	-
	2011年1月1日 1月111日 1月111日 1月111日 1月111日 1月111日 1月111日 1月111日 1月1111 1月1111 1月1111 1月1111 1月1111 1月11111 1月11111 1月11111 1月111111	新日日 王 朝 TCFS++マ	# <u>7</u> (#)		•	· MILES · MILLION	保存計 (1日日)

● SSCOM V5.11.1 単口/20世紀日記録/サキナ5丁丁」201905日9月20m、QQ計 52 ● SSCOM V5.13.1 単口/20世紀日間に載作者大切丁 第月20日 単口の音 型元 34年 本文式書 小丁昌 時代 単葉作者 大切合に 酒田油口 単口容量 型元 安洁 多支持者 小丁目

7.2.3 Soft-ap + STA mixed mode example

Soft-AP + STA is a hybrid mode that allows modules to be connected to other devices and hot spots on other devices at the same time, but it does not support WIFI penetration on both devices at the same time, can achieve different connections at different times, the client or server to complete the function of transmission. To illustrate this pattern briefly with a basic hybrid example, the sequence and response of the serial instructions are as follows:

① AT+WIFI=1 //turn on the RF function of WIFI

Return: OK

② AT+CWMODE=3 //Set WIFI Mode to mixed mode

Return: OK

③AT+CWSAP="ESP32", "1234567890", 5,3//set WIFI name and password in AP mode

Return: OK

(4)AT+CWJAP="MS11SF1", "1234567890"//name and password to connect to other

device hotspots

Return: WIFI CONNECTED Wifi GOT IP OK

```
[16:59:30.237]波→◇AI+CNMDDE=3
[16:59:30.256]以☆◆AI+CNMDDE=3
OK
[16:59:51.446]波→◇AI+CNSAP="ESF32_softAP", "1234567890", 5, 3
[16:59:51.495]以☆◆AI+CNSAP="ESF32_softAP", "1234567890", 5, 3
[16:59:52.062]以☆◆AI+CNSAP="ESF32_softAP", "1234567890", 5, 3
[16:59:52.062]以☆◆AI+CNJAP="MinewSemi=1", "MinewSemi123"
[17:00:37.546]波→◇AI+CNJAP="MinewSemi=1", "MinewSemi123"
[17:00:37.559]以☆◆AI+CNJAP="MinewSemi=1", "MinewSemi123"
[17:00:38.299]以☆◆AI+CNJAP="MinewSemi=1", "MinewSemi123"
[17:00:38.299]以☆◆VIFI CONNECTED
[17:00:54.352]以☆◆+STA_CONNECTED: "26:92:6d:2d:ad:ea"
[17:00:54.575]以☆◆+DIST_STA_IP: "26:92:6d:2d:ad:ea", "192.168.4.2"
```

MS11SF1 Datasheet

After completing the above instructions, the WIFI of the module is turned on and can be connected to other devices, and the WIFI hotpots of other devices are also connected, you can use the single-mode pass-through example above to create a connection to pass-through without doing so in this section. However, it should be noted that, for example, if you are doing a TCP client pass-through, you can not do any other pass-through AT the same time. You need to disconnect the TCP connection in instruction mode, which is AT + CIPCLOSE, it can turn off TCP/UDP/SSL single-or multiple-connection mode. For more detailed examples of TCP-IP, refer to the MS11SF1-AT Command set file for instructions, Examples, and AT command sets.

7.2.4 Connect the cloud server to the MQTT

MS11SF1 can communicate with cloud servers such as Ali Cloud, Baidu Cloud, Tencent Cloud, Amazon Cloud, etc. .Specific communication steps include related cloud connection documents, MQTT communication between MS11SF1 and PC client, Android client and IOS client, refer to the testing documents of MQTT communication between clients and modules, please contact us to provide.

8 Power Consumption Description

8.1 RF power consumption

The following power consumption figures are based on 3.3 V power supply, 25° C ambient temperature, and test results done at the RF interface.

Operating mode		Operating status	Peak value (mA)	Average value (mA)	
		TX-802.11b, 1Mbps, @21dBm	371.18	354.53	
	T) (TX-802.11g,54Mbps, @19dBm	289.38	263.59	
RF	RF	TX-802.11n,HT20-MCS7, @18.5dBm	273.81	251.22	
ModeRX		TX-802.11n,HT40-MCS7, @18.5dBm	249	220.4	
		RX-802.11n,HT20-MCS7	95.38	83.88	
	RX	RX-802.11n,HT40-MCS7	102.87	86.36	

8.2 Power management

Operating mode	Operating status	Average value
Modem-sleep	CPU is powered on and clock frequency configurable;	
(Current)	Wi-Fi, BLE baseband and RF off;	25.04mA
(Support)	Wi-Fi or BLE to stay connected.	
	CPU is powered off;	
light-sleen	Host, MAC, RTC timer, external interrupt can wake up	1524
Light-sleep	the chip;	153µA
	Wi-Fi or BLE to stay connected.	
	The RTC memory is in working state;	
Deep-sleep	sleep The RTC memory is in working state;	
	The RTC clock timer or RTC GPIO can wake up the chip.	
Power off		
(Support)	The CHIP_EN pin is pulled low and the chip is turned off	0.31µA

9 PCB Layout

Module antenna area couldn't have GND plane or metal cross line, couldn't place components nearby. It is better to make hollow out or clearance treatment or place it on the edge of PCB board.

Notice: Refer to examples as below, and highly suggest to use the first design and the adjustment of modules antenna design according to the first wiring.



Layout notes:

- 1) Preferred Module antenna area completely clearance and not be prevented by metals, otherwise it will influence antenna's effect (as above DWG. indication).
- 2) Cover the external part of module antenna area with copper as far as possible to reduce the main board's signal cable and other disturbing.
- 3) It is preferred to have a clearance area of 4 square meter or more area around the module antenna (including the shell) to reduce the influence to antenna.
- 4) Device should be grounded well to reduce the parasitic inductance.
- 5) Do not cover copper under module's antenna in order to avoid affect signal radiation or lead to transmission distance affected.
- 6) Antenna should keep far from other circuits to prevent radiation efficiency reduction or affects the normal operation of other lines.
- Module should be placed on edge of circuit board and keep a distance away from other circuits.
- 8) Suggesting to use magnetic beads to insulate module's access power supply.

10 Reflow and Soldering

 Do SMT according to above reflow oven temperature deal curve. Max. Temperature is 260°C;

Refer to IPC/JEDEC standard; Peak TEMP<260 $^{\circ}$ C; Times: \leq 2 times, suggest only do once reflow soldering on module surface in case of SMT double pad involved. Contact us if special crafts involved.



- Suggesting to make 0.2mm thickness of module SMT for partial ladder steel mesh, then make the opening extend 0.8mm
- 3) After unsealing, it cannot be used up at one time, should be vacuumed for storage, couldn't be exposed in the air for long time. Please avoid getting damp and soldering-pan oxidizing. If there are 7 to 30 days interval before using online SMT, suggest to bake at 65-70 $^{\circ}$ C for 24 hours without disassembling the tape.
- 4) Before using SMT, please adopt ESD protection measure.

11 Package Information







* (Default unit: mm Default tolerance: ±0.1)

Packing detail	Specification	Net weight	Gross weight	Dimension
Quantity	850PCS	680g	1150g	W=44mm, T=0.35mm

* Note: Default weight tolerance all are within 10g (except the special notes)

MINEWSEMi

• Quality

Cognizant of our commitment to quality, we operate our own factory equipped with state-of-the-art production facilities and a meticulous quality management system. We hold certifications for ISO9001, ISO14001, ISO27001, OHSA18001, BSCI.

Every product undergoes stringent testing, including transmit power, sensitivity, power consumption, stability, and aging tests. Our fully automated module production line is now in full operation, boasting a production capacity in the millions, capable of meeting high-volume production demands.

• Contact Us

Shenzhen Minewsemi Co., Ltd. is committed to swiftly delivering top-quality connectivity modules to our customers. For assistance and support, please feel free to contact our relevant personnel, or contact us as follows:

Web: www.minewsemi.com

Email: <u>minewsemi@minew.com</u>

Linkedin: www.linkedin.com/company/minewsemi

Shop: https://minewsemi.en.alibaba.com/

Tel: +86 0755-28010353

Address: 3rd Floor,I Building, Gangzhilong Science Park, NO.6, Qinglong Road,Longhua District, Shenzhen, China

Click the icon to view and download the latest product documents electronically.



• Copyright Statement

This manual and all the contents contained in it are owned by Shenzhen Minewsemi Co., Ltd. and are protected by Chinese laws and applicable international conventions related to copyright laws.

The certified trademarks included in this product and related documents have been licensed for use by MinewSemi. This includes but is not limited to certifications such as BQB, RoHS, REACH, CE, FCC, BQB, IC, SRRC, TELEC, WPC, RCM, WEEE, etc. The respective textual trademarks and logos belong to their respective owners. For example, the Bluetooth® textual trademark and logo are owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners. Due to the small size of the module product, the "®" symbol is omitted from the Bluetooth Primary Trademarks information in compliance with regulations.

The company has the right to change the content of this manual according to the technological development, and the revised version will not be notified otherwise. Without the written permission and authorization of the company, any individual, company, or organization shall not modify the contents of this manual or use part or all of the contents of this manual in other ways. Violators will be held accountable in accordance with the law.

MINEWSEM

Tel: 0086-755-2801 0353 Email: minewsemi@minew.com Web: www.minewsemi.com Address: 3rd Floor, Building I, Gangzhilong Science Park, Qinglong RoadLonghua District, Shenzhen 518109, China



Tel: 0755-2801 0353 E-mail: <u>minewsemi@minew.com</u> Copyright© Shenzhen Minewsemi Co., Ltd.